

Polaris Universal Damask kitt ORV.

CHALLENGE
ACCEPTED


Universal Damask kitt till ORV.

Passar flertalet Polaris ATV och är en enkel lösning att reparera din damask utan att ta bort drivaxeln.

2830828	ATV kitt för reparation ute i fält (ink verktyg klammer mm.
2830529	Endast damask ATV
2830526	UTV Kit för reparation ute i fält (Ink verktyg klammer mm)
2830527	Endast damask UTV

CV BOOT REPAIR KIT

- A quick trail side fix to increase trail time
- The flexible and durable boot material expands over a cone tool for CV boot repairs, without disassembling CV axles
- Universal fit - works as a temporary fix for most powersports axles
- All components fit inside the cone, and a cover is provided for compact durable storage
- Easily fits in a cargo box, attached to the roll cage, in the glovebox, or many other storage locations



Items shown are contained inside cone


FIX ON THE GO | TEMPORARY COVERAGE

ATV CV BOOT REPAIR KIT	ATV TRAIL BOOT ONLY
Kit includes the following items:	» 2830529
• (1) Expandable CV Boot	
• (1) Reusable Cone Tool	
• (2) CV Boot Clamps	
• (1) Tube of Silicone Lube	
• (1) Grease Packet	
• (1) Cone Cover	
» 2830528	


UTV

» CV REPAIR KIT 2830526
» TRAIL BOOT ONLY 2830527


HOW TO INSTALL

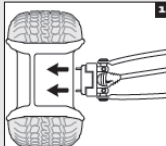


1. Remove wheel and axle nut.

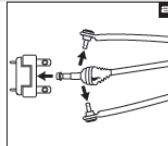


2. Remove brake caliper, hub, tie rod, & upper & lower ball joints.

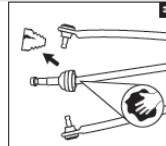


3. Remove old boot & clean joint.

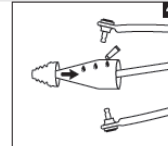

4. Spread silicone lube on entire cone tool. Slide boot over cone tool, large end first. See package for outer boot instructions.

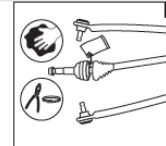

5. Empty the bag of grease into the CV joint/boot, clean sealing points & install clamps.

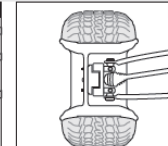

6. Reassemble tie rod, ball joints, brake caliper, axle nut, tire & wheel.

Refer to your owner's manual for further instructions and torque specifications.
*Designed for temporary CV boot repair. Purchase the OEM CV Boot for a permanent repair.

QR Kod till Tillbehör ORV



POLARIS